

DELETION PEN

Correction pen for conventional negative plates, CTP violet photopolymeric plates : AGFA N 91 and

CTP Thermal plates: FUJI PRO T - KODAK SONORA - AGFA AMIGO - AGFA AZURA

WORKING INSTRUCTIONS

Correction, before printing, on developed plate :

- Remove the image, rubbing with deletion pen on the area you want to cancel. If necessary, rub more times.
- Immediately after correction, remove, with wet cotton or wet sponge, the correction liquid on the plate.
- Be careful that you do not wipe the correction liquid residues in the image area that has not to be removed.
- Clean and regum the plate.
- After correction, always put the cap on the pen.

Correction of plate during printing:

- Remove the ink from plate with dedicated plate cleaner.
- Be sure that all ink is removed.
- Make the correction area complete dry.
- Remove the image, rubbing with deletion pen on the area you want to cancel. If necessary, rub more times.
- Immediately after correction remove with wet cotton or wet sponge the correction liquid left on the plate.
- Be careful that you do not wipe liquid correction residues in the image area that has not to be removed.
- After cleaning with wet cotton or wet sponge, clean the plate with the dedicated plate cleaner to restore the desensitizing capacity of the plate.
- After correction, always put the cap on the pen.

Safety

Before using this product, read Safety Data Sheet

Storage

- Store at room temperature in a dry, well ventilated area.
- Keep away from heat and direct sunlight
- Keep the pen closed
- Shelf life: 24 months from production date

Information given in this sheet is considered to be reliable and is provided in good faith but without guarantee. Specifications subject to change without notice.

